

Print from Adobe Acrobat to the Epson SureColor P7000:

Bring your own Epson paper up to 24 inches wide.

Go to **File/Print:**

Printer: Epson SureColor SC-P7000

Make sure the preview accurately represents what you intend to print.

Set **Page Scaling:**

Fit:

shrink oversize pages,
grow smaller pages to fit your
paper

Actual size:

100% scale

Shrink oversized pages:

Self explanatory



1-Click Page Setup:

Format For: EPSON SC-P7000

Paper Size: Choose the size sheet
you are inserting

Orientation: Portrait or Landscape

2-Click Advanced:

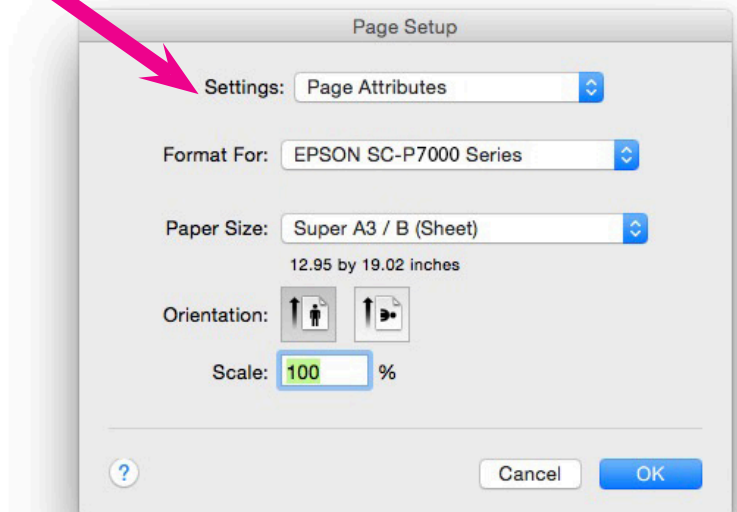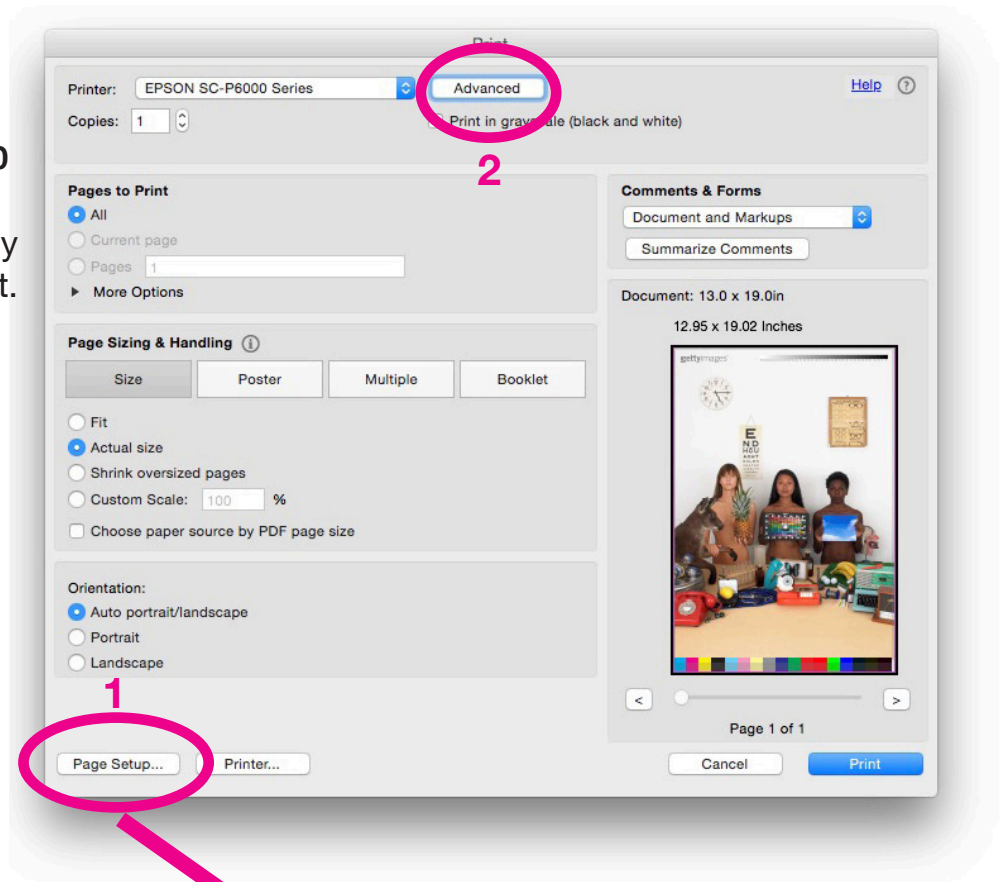


**Make sure to select Sheet or Sheet Centered if you are using cut sheet paper.*

Advanced Print Setup:

Most importantly, make sure you are using


Printer Color Management.

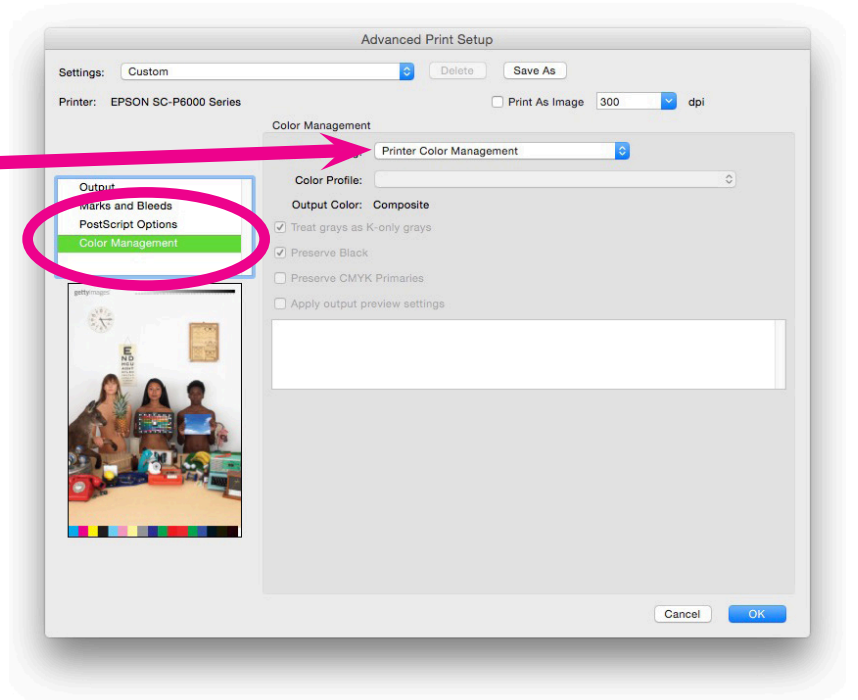

Advanced Print Setup:


If you need trim marks, select *Marks and Bleed* and choose the marks you want.

When you are satisfied, click **OK**.

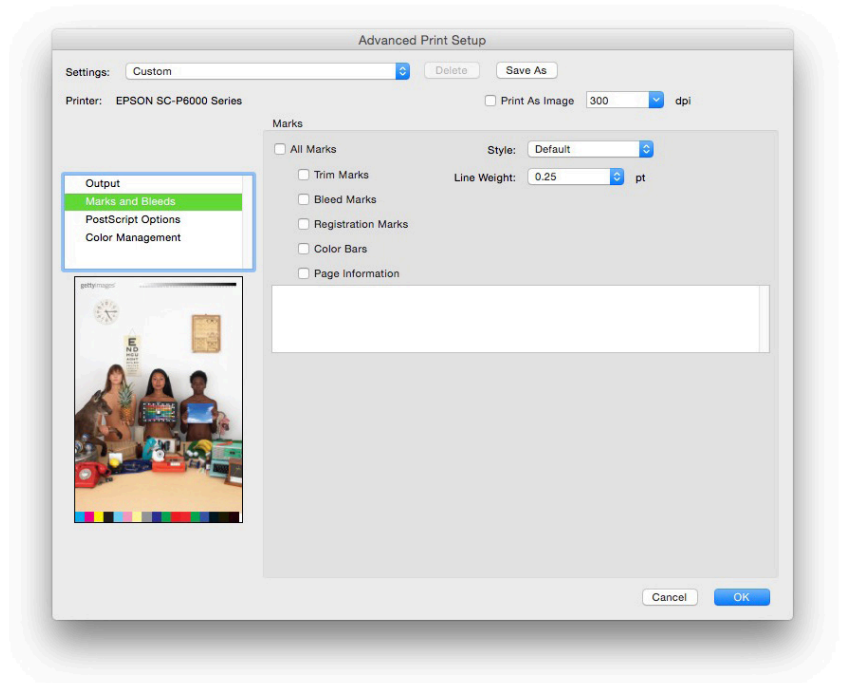


After clicking **OK**, you are back here:


3-Click Printer:

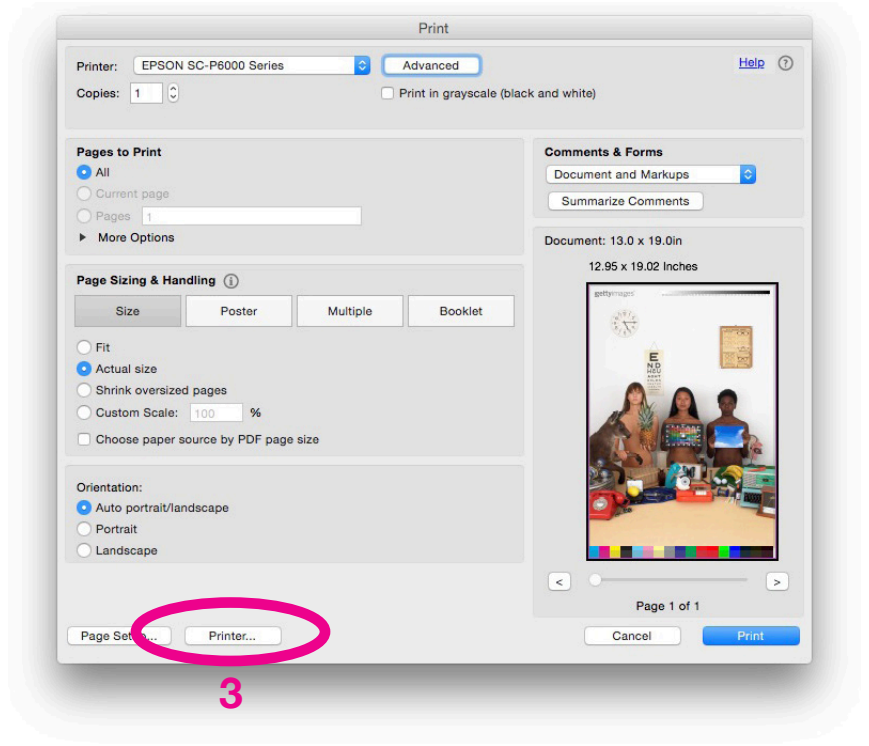

Click the pull-down menu which currently says, **Layout**.

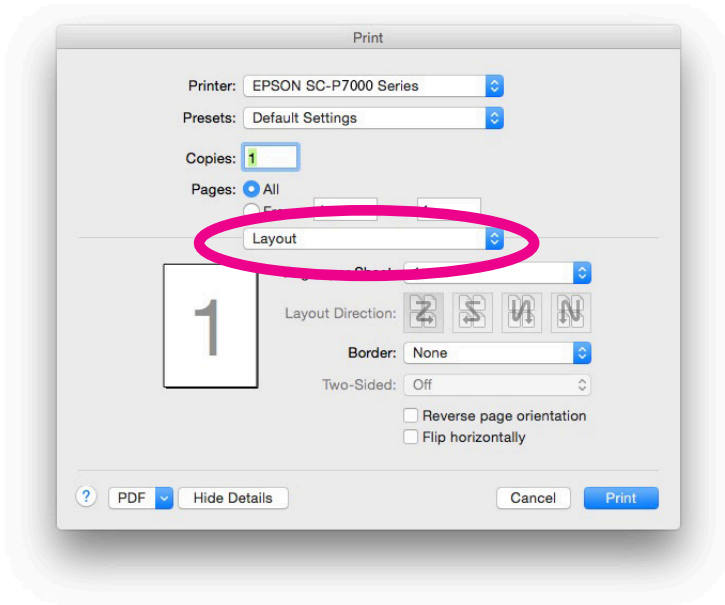

Start at **Color Matching** and work down through the pull-downs.

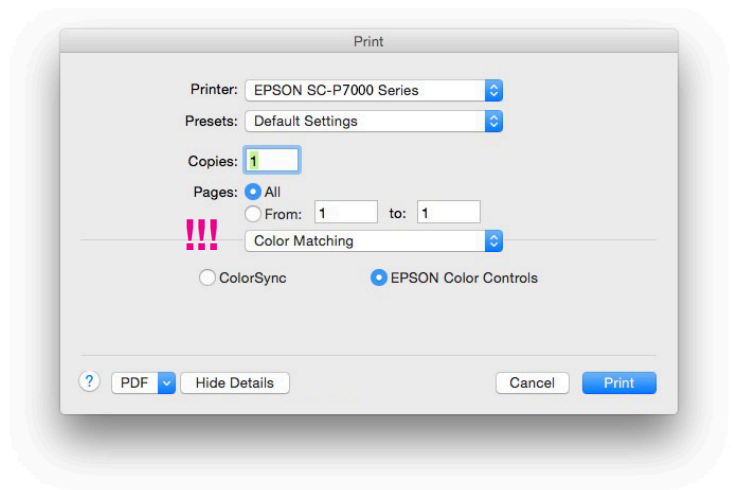

Keep clicking the pull-down menu to get to the printer options for your specific settings.

Printer Settings:

These are the specific settings for your job on this printer

Page Setup: Should match your choice of Roll or Sheet paper

Media Type: Pull down the media that most closely matches your paper

Print Mode: Epson PrecisionDot

Color Mode: Epson Standard (sRGB)

Output Resolution: 720dpi or 1440dpi depends on media type

High Speed: Can cause banding in some cases

Flip Horizontal: Prints a mirror image

Finest Detail: Adds sharpening to poor JPG photos, doesn't do anything to improve printout

If you are using printer color management, the **Advanced Color Settings** can be used to manipulate fine adjustments in color cast, etc. without further editing the image. Great for last minute fine tuning

